

Wonlex CT10A and CT20 4G GPS kids smartwatch.

Instructions for watch setup.



Insert the NANO SIM card into the card slot and then turn on the watch.
(Note: SIM card with data volume and credit)

Control station setting, main route
Send an SMS from your phone to the watch phone number with the text:
pw,123456,center,MOBILE PHONE NUMBER#
(Note: Use lowercase letters, commas and remember # at the end)



pw,123456,apn,nov.is,,27411#
pw,123456,apn,gprs.is,,27402#
pw,123456,apn,internet.is,,27401#
pw,123456,apn,internet,,27401#
pw,123456,apn,internet.365.is,,#

The watch answers back that an apn is activated in the watch within 1 minute.

No

Yes

Change the "pw" password.

Note. It is necessary to change the password code in the watch in a personal password that the user chooses.
pw can contain up to 5 lowercase letters and be a maximum of 9 characters long
This is done by sending the message **pw,OLD_PASSWORD,pw,NEW_PASSWORD#** from the phone to the phone number of the watch. Example: pw,123456,pw,888999#
- There we were changing the password on the watch from being 123456 to being 888999
(Note. no confirmation will be returned.)

Turn off the watch by holding down Power/SOS button for approx. 15-60 sec and then turn it on again with the same button.
Then install a program e.g. Wonlex app for your phone, see guide. on p.2.

Note in the CT10A watches, you have to pop the watch out of the strap case to access the SIM card slot.



Then insert a NANO SIM card into the card slot.



Note. In CT10A the processor faces up to the display.

Note. In CT20 the processor faces down from the screen.

Common solutions

- Note. to have „DATA ROAMING“ turned on in your phone.
- Note. whether the watch is switched on.
- Note. whether there is an active SIM card in the watch and try calling the watch. (Note SIM card with data volume and credit)
- Try using the password 523681 instead of 123456 Example: pw,523681,center,8559999#
- Note. to use the correct password, if a password has been changed then use the new personal password instead of 123456.
- You need to adjust the number of commas, periods and spaces in the configuration items, the keyboards on mobile phones often correct the text sequences incorrectly and automatically create spaces after the period and comma.
- Note. need your carrier to have the correct apn information.
- For more information, see "Questions and answers" on page 2.

Instructions on installing smartphone App.

1. Make sure the watch has already been activated (Page. 1) Before proceeding!
2. Download and install „Wonlex“ app through Google Play / iOS App Store on parent or guardian phone.
3. Open app and select Register to create a new account
 - a. Watch id/License: *Scan the QR code found on the outside of the watch container.*
 - b. Account: *Your email address*
 - c. Nickname: *Nickname for the watch user (Johny etc.)*
 - d. Password: *6-12 character password to protect Wonlex account*
 - e. R_Password: *Confirm (repeat)the chosen password*
 - f. Notice that the region setting is set to: „Europe and Africa“
4. When adding another watch to the app, navigate to „me“ (Avatar upper left corner) -> “ Device List“ -> „Add device“.
5. When adding another phone, install the app on another phone and log in using the same account as before.
6. Through settings, navigate to the „Phone book“ and insert contacts that the child will be able to call. Up to 15 contacts can be added to each watch. If attempted to call the watch from a phonenumber outside of the contact list, the phonecall will automatically be blocked.



Watch ID - QR code example.

FAQ:

The app displays inaccurate location:

Note that the watch must be outside and visible to satellites in order to transmit accurate GPS location. If the watch reaches only a few or no satellites the location becomes inaccurate.

The app displays „Device offline“ or keeps transmitting wrong GPS location:

SMS code: **pw,PASSWORD,ip,52.28.132.157,8001#** requests updated location information from the watch.

I lost the ID number (The QR code):

ID can be displayed in the „App“ tab on the watch itself or using SMS code: **pw,PASSWORD,ts#**

I don't want the watch to connect with other Wonlex smartwatches (Friend's watches):

Turn off the feature: **pw, PASSWORD,makefriend,0#** ---- Turn on the feature: **pw, PASSWORD,makefriend,1#**

I don't want the watch to interrupt during school hours:

You can set the watch to „Do Not Disturb“ mode using the app, blocking all functionality apart from displaying the current time. You set the period for which the setting is active. Note that the period has to be set within a 24 hour limit (00:01-23:59). For example a 20:00-08:00 bedtime has to be set by creating 2 different periods, 20:00-23:59 and 00:01-08:00.

What kind of subscription do I need for the watch?:

The watch uses a NANO SIM card containing minimum amount of data(1GB pr. Month suffices) for location transmitting and common usage. The watch also needs credit for phonecalls if the subscription charges specifically for phonecalls and texting (SMS).

Further information and service is provided by Tölvutek ehf.